


# CONDENSER FAN

## ON-VEHICLE INSPECTION

### 1. DISCONNECT NEGATIVE (-) TERMINAL CABLE FROM BATTERY

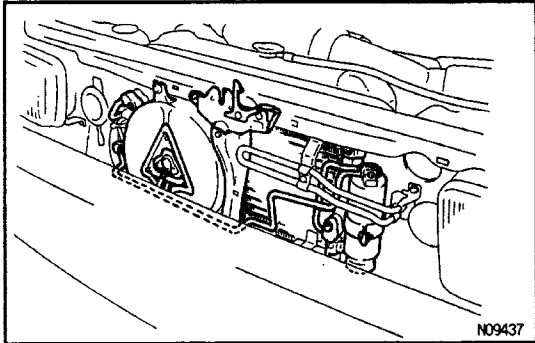


### 2. INSPECT CONDENSER FAN

- (a) Disconnect the fan connector.
- (b) Connect battery and ammeter to the cooling fan connector.
- (c) Check that the condenser fan rotate smoothly, and check the reading on the ammeter.

**Standard amperage:**

**$8.0 \pm 0.7 \text{ A}$**

- (d) Connect the fan connector.

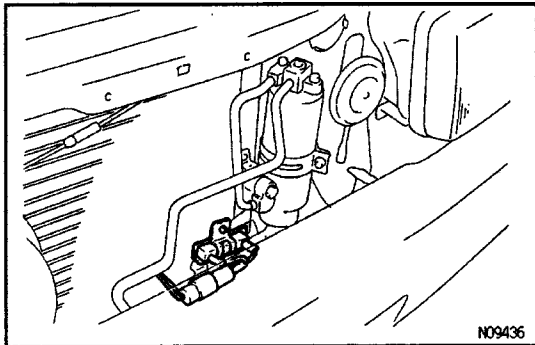

### 3. INSPECT FAN SPEED CONTROL RESISTOR

- (a) Remove the front grille.
- (b) Using an ohmmeter, check the resistance of the resistor.

**Standard resistance:**

**$0.6 \pm 0.06\Omega$  at  $20^\circ$  ( $68^\circ \text{F}$ )**

If resistance is not as specified, replace the resistor.