


BACK-UP LIGHT

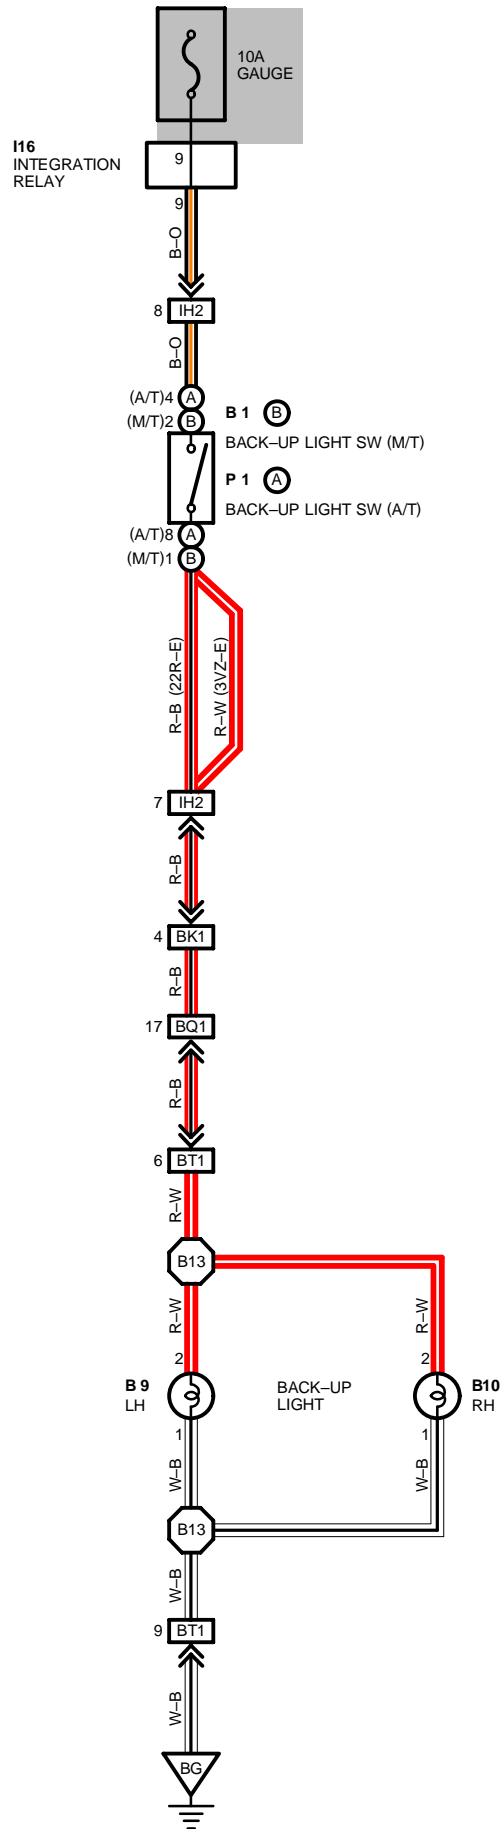

SERVICE HINTS

B 1(B), P 1(A) BACK-UP LIGHT SW

(A) 4-8, (B) 2-1: CLOSED WITH SHIFT LEVER IN R POSITION

○ : PARTS LOCATION

| CODE | | SEE PAGE | CODE | | SEE PAGE | CODE | | SEE PAGE |
|------|---|------------|------|-----|------------|------|---|------------|
| B 1 | B | 24 (3VZ-E) | B10 | I16 | 29 | P 1 | A | 27 (22R-E) |
| | | 26 (22R-E) | | | 28 | | | |
| B 9 | | 29 | P 1 | A | 25 (3VZ-E) | | | |

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| CODE | SEE PAGE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|----------|--|
| IH2 | 34 | ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL) |
| BK1 | 36 | FLOOR NO. 3 LH WIRE AND COWL WIRE (LEFT SIDE OF FRONT LH SEAT) |
| BQ1 | 36 | FLOOR NO. 3 LH WIRE AND FLOOR NO. 2 WIRE (LEFT SIDE OF REAR LH SEAT) |
| BT1 | 36 | BACK DOOR NO. 1 WIRE AND FLOOR NO. 2 WIRE (BESIDE LEFT REAR COMB. LIGHT) |

▽ : GROUND POINTS

| CODE | SEE PAGE | GROUND POINTS LOCATION |
|------|----------|------------------------|
| BG | 36 | UNDER LEFT REAR PILLAR |

○ : SPLICE POINTS

| CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS | CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS |
|------|----------|---------------------------------|------|----------|---------------------------------|
| B13 | 36 | BACK DOOR NO. 1 WIRE | | | |

