


REAR HEATER

* 1: 22R-E AT
 * 2: 3VZ-E, 22R-E M/T

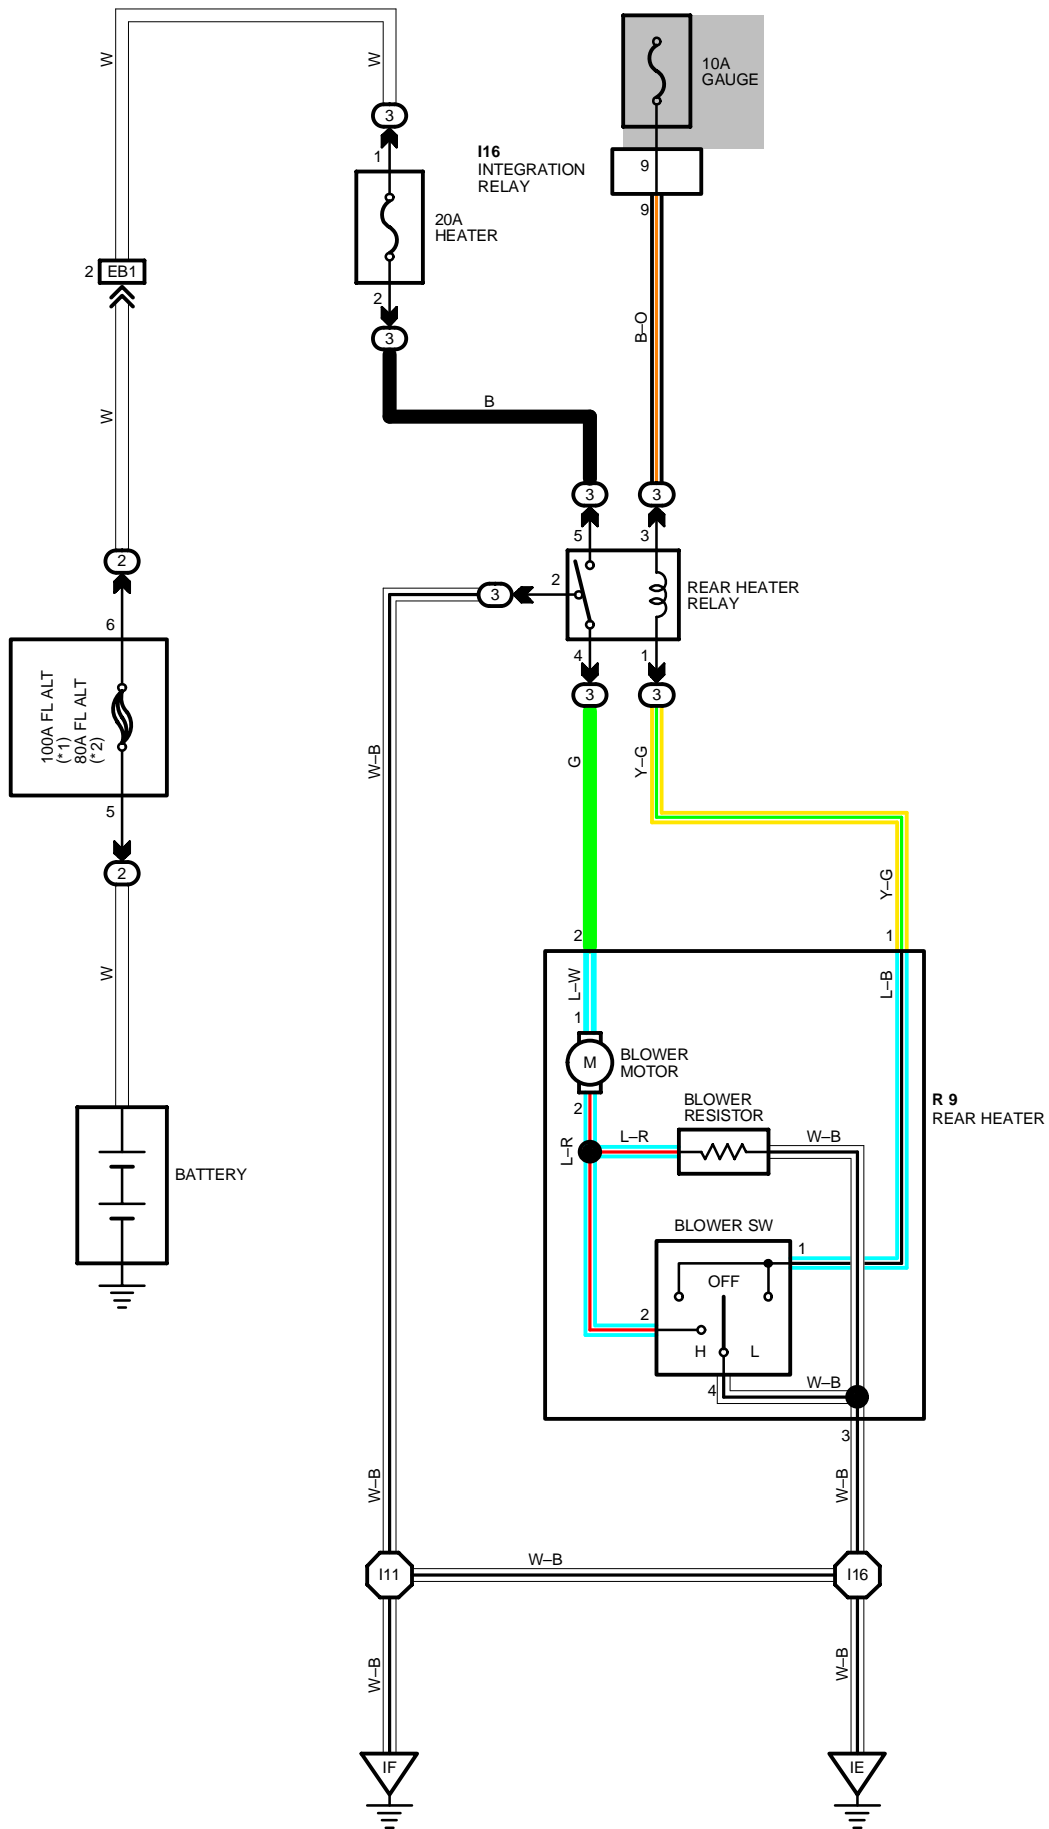

SERVICE HINTS

REAR HEATER RELAY

(3)5- (3)4 : CLOSED WITH IGNITION SW AT **ON** POSITION AND REAR HEATER BLOWER SW AT **HIGH** OR **LOW** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
I16	28	R 9	29		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	R/B NO. 2 (ENGINE COMPARTMENT RIGHT)
3	23	R/B NO. 3 (RIGHT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	30 (3VZ-E)	COWL WIRE AND ENGINE ROOM MAIN WIRE (R/B NO. 2)
	32 (22R-E)	

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	34	LEFT KICK PANEL
IF	34	RIGHT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I11	34	COWL WIRE	I16	34	COWL WIRE

